

# Always here to help you

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)


QC5380

Question?  
Contact  
Philips



## User manual
 
# PHILIPS

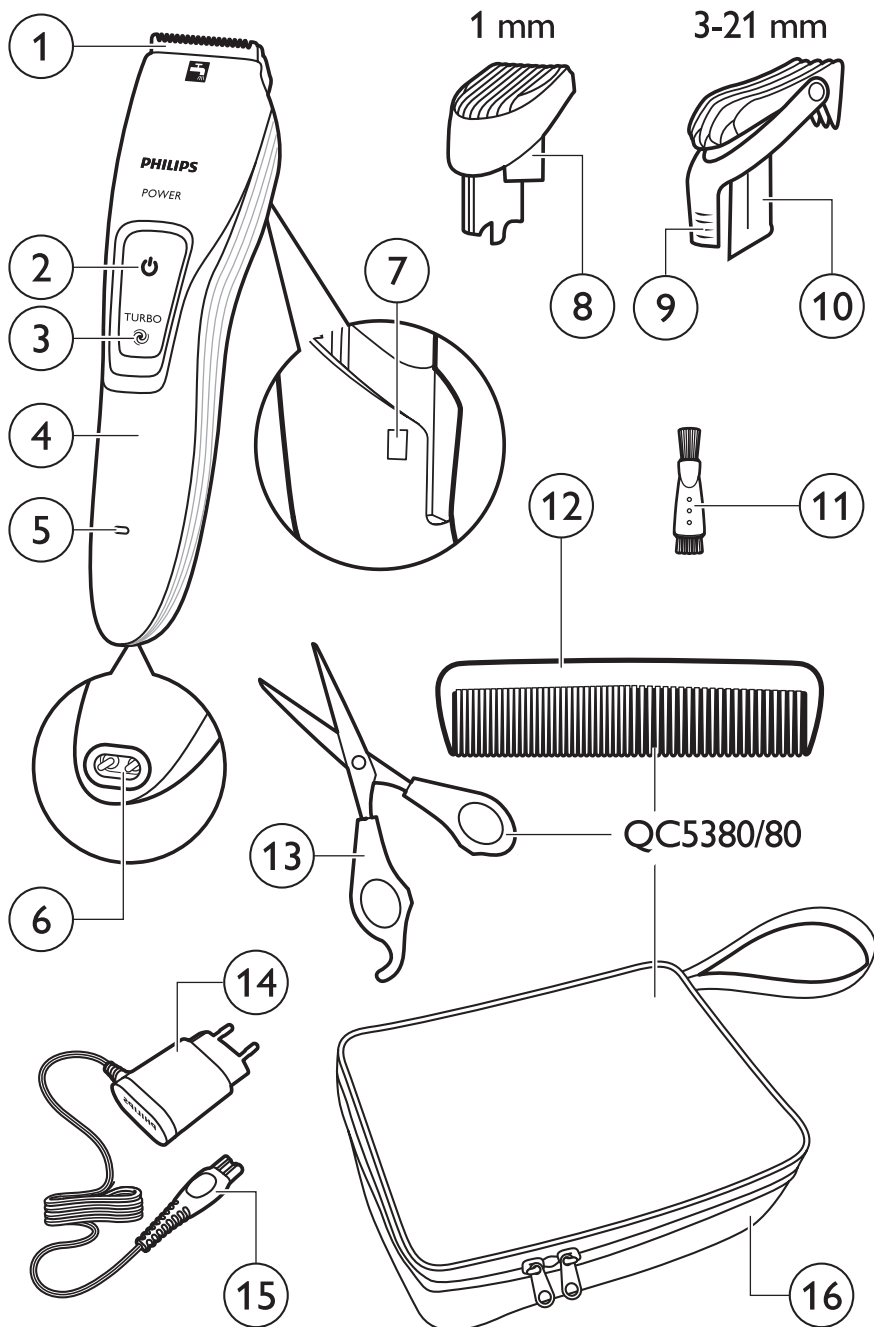

## Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

## General description (Fig. 1)

- 1 Cutting element
- 2 On/off button
- 3 Turbo button
- 4 Handle
- 5 Charging light
- 6 Socket for appliance plug
- 7 Hair length settings window
- 8 Buzz comb
- 9 Setting selector
- 10 Large comb
- 11 Cleaning brush
- 12 Barber comb (QC5380/80 only)
- 13 Scissors (QC5380/80 only)
- 14 Adapter
- 15 Appliance plug
- 16 Pouch (QC5380/80 only)

## Preparing for use

 
*Note:* You can also use the appliance directly from the mains when the battery is empty.

## Charging

Charge the appliance for at least 1 hour before you use it for the first time and after a long period of disuse.

When the appliance is fully charged, it has an operating time of up to 75 minutes.

When the charging light lights up orange, the battery is running low (approx. 10 minutes of operating time left) and you need to recharge the appliance.

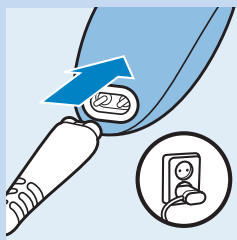


- 1** Switch off the appliance before you charge it.
- 2** Insert the appliance plug into the socket of the appliance and put the adapter in the wall socket.
  - The charging light starts to flash green to indicate that the appliance is charging.
  - When the batteries are fully charged, the charging light lights up green continuously. After 30 minutes the charging light goes out to save energy.

## Using the appliance

 *Note: You can also use the appliance directly from the mains when the battery is empty.*

### Clipping with comb

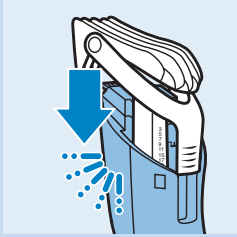


The appliance comes with 2 combs for different hair lengths. The hair length settings are indicated in millimetres on the comb. The settings correspond to the remaining hair length after clipping.

**1 Select the comb you want to use.**

 The buzz comb cuts the hair to a length of 1 mm. The large comb cuts the hair to a length of 3 mm to 21 mm.


**2 Slide the comb straight into the guiding grooves on both sides of the handle ('click').**

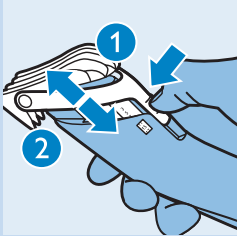

**3 To set the comb to the desired setting, press the setting selector (1) and slide the comb to the desired hair length setting (2).**

The settings in the window show the selected hair length in millimetres after cutting.

 *Tip: Write down the hair length settings you selected to create a certain hairstyle as a reminder for future clipping sessions.*

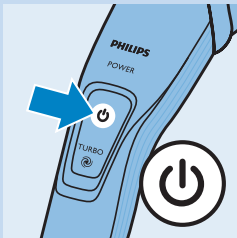

**4 Press the on/off button to switch on the appliance.**

**5 Move the appliance through the hair slowly.**

### Tips

- To clip most effectively, move the appliance against the hair growth direction.
- Since all hair does not grow in the same direction, you need to move the appliance in different directions (upwards, downwards and across).



- Make sure that the flat part of the comb is always fully in contact with the scalp to obtain an even result.
- Make overlapping passes over the head to ensure that you cut all the hair that needs to be cut.

**6 Regularly remove cut hair from the comb.**

If a lot of hair has accumulated in the comb, remove the comb from the appliance and blow and/or shake the hair out of it.

## Contouring without comb

You can use the appliance without comb to trim hair very close to the skin (0.5mm) or to contour the neckline and the area around the ears.

 
 
Be careful when you clip without comb because the cutting element removes every hair it touches.

- 1 Press the setting selector and slide the comb up, to remove the comb off the appliance.
- 2 Before you start to contour the hairline around the ears, comb the hair ends over the ears.
- 3 Press the on/off button to switch on the appliance.

*Note: During trimming, you can use the turbo function for extra suction power and trimming speed (see section 'Turbo function' below).*

- 4 Tilt the appliance in such a way that only one edge of the cutting element touches the hair ends when you shape the contours around the ears.

Only cut the hair ends. The hairline should be close to the ear:

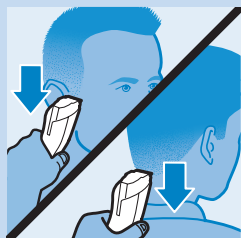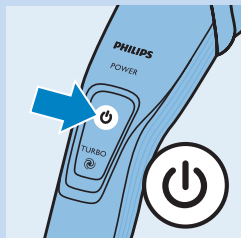


- 5 To contour the neckline and sideburns, turn the appliance and make downward strokes.

Move the appliance slowly and smoothly. Follow the natural hairline.

## Turbo function

 
You can use the turbo function to increase the cutting speed.

- 1 Switch on the appliance.

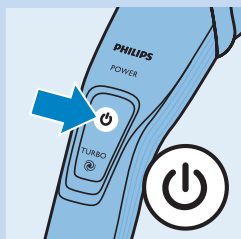

- 2 Press the turbo button.

 When you switch off the appliance, the turbo function is deactivated automatically.

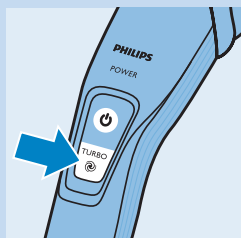




## Cleaning

Clean the appliance every time you have used it with the cleaning brush and with warm water (max. 40°C).

Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol, acetone or ethereal oils to clean the appliance.

*Note: The appliance does not need any lubrication.*

   - 1 Switch off the appliance and disconnect it from the mains.
- 2 Remove the comb from the appliance and rinse it under the tap.
- 3 Brush the outside of the shaving unit with the brush supplied.
- 4 Push the centre top end of the cutting element upwards with your thumb until it opens.

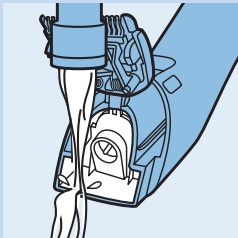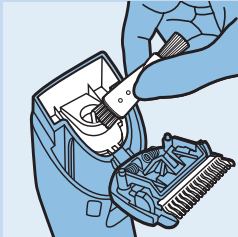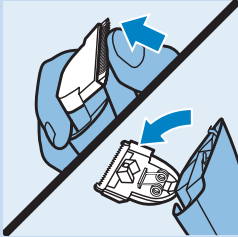

- 5 Use the cleaning brush to remove the cut hair.
- 6 Clean the appliance under a warm running tap to flush out the cut hair.